




Bisagra superacodada 110° Insert hinge

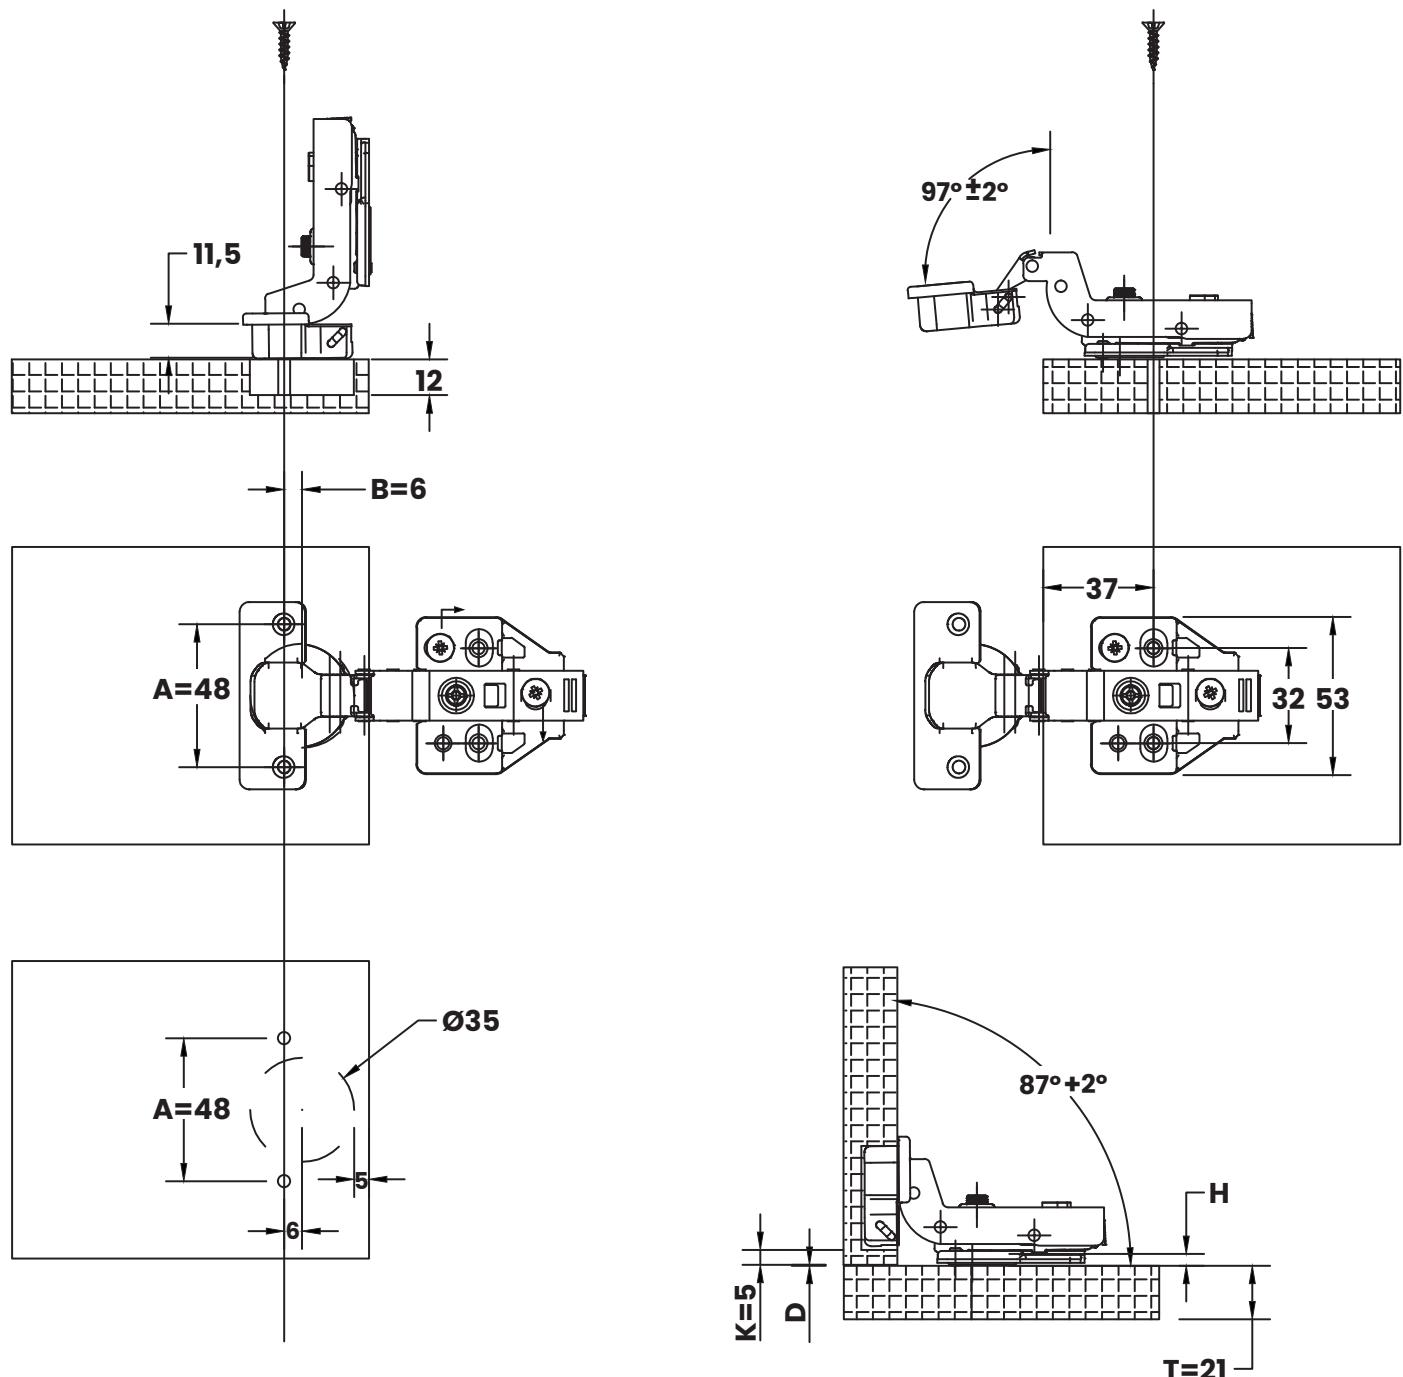

H = Altura de la base.

D = Distancia de cobertura necesaria en el panel lateral

K = Ø35 mm. Distancia desde el costado a cazoleta de la bisagra.

T = Grosor de la puerta.

H = Height of mountingplate.

D = Required cover distance on side panel

K = Ø35 mm. Distance from edge of door to the edge of the cup.

T = Door thickness.

H	K			
	3	4	5	6
D				
0	0	-1	-2	-3
2	2	1	0	-1